Sony Corporation @ 2003 Printed in China

http://www.sony.net/

For customers in the United States

Product registration

Please register this product on line at www.sony.com/productregistration. http://www.sony.com/productregistration


Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.


Owner's Record


The model number is located at the bottom and the serial number is located inside the cassette holder. Record the model number and the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. Serial No._



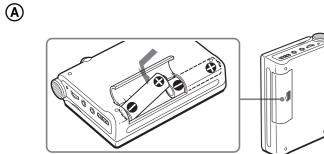

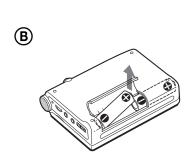

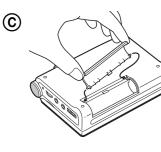



E

В

B

MIC (Built-in microphor

Micrófono incorporado

◄ REW/

PAUSE -

BATT

DC IN 3V

MIC (PLU IN POWER)

WARNING To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Adaptador de alimentación de ca

REC TIME/

DC IN 3V

Tab for side A

Lengüeta de la cara A

PLAY MODE

- SPEED CONTROL

AC power adaptor

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, table-cloths, curtains etc. And don't place lighted candles on the apparatus.
- · To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- · Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

The instructions in this manual are for 2 models.

Note

English

Tapes recorded with the REC TIME/PLAY MODE switch in the DOUBLE position cannot be played properly on a tape recorder vithout the REC TIME/PLAY MODE switch function.

Supplied accessories

TCM-	220DV	210DV
AC power adaptor (1)	-	0
Batteries LR6 (2)	0	-
Cassette tape HF-60 (1)	0	0
Monaural microphone (1)	0	-
Carrying pouch (1)	0	
O: supplied		
- not supplied		

Dry Batteries (see Fig. A-A)

to the DC IN 3V jack.

- Open the battery compartment
- 2 Insert two R6 (size AA) batteries (supplied to TCM-220DV only) with correct polarity and close the lid

- Do not charge a dry battery.
- Do not use a new battery with an old • Do not use different types of
- When you do not use the unit for a long time, remove the batteries to avoid any damage caused by battery
- leakage and subsequent corrosion Dry batteries will not be drained when another power source is connected.

To take out the batteries (see Fig. A-B)

To attach the battery compartment lid if it is accidentally detached (see Fig. A-©)

When to replace the batteries (see Fig.A-D) Replace the batteries with new ones when the BATT lamp dims.

- After the batteries have been used for a while, the BATT lamp may flicker with the playback sound when you turn up the volume; however this does not mean that you need to replace the batteries.
- The unit will play back normally for a while, even after the BATT lamp dims. However, replace the batteries as soon as you can. If you do not, subsequent recording will not be done correctly.

Measured value by the standard of

Information Technology Industries

series cassette tape on which music

"STAMINA" alkaline dry batteries

depending on the operating condition,

the surrounding temperature and

For maximum performance we

recommend that you use alkaline

Association). (Using a Sony HF

has been recorded is played at

* When using Sony LR6 (SG)

The battery life may be shorter

JEITA (Japan Electronics and

LR6 (SG)** (SR)

Battery life* (approx. hours) Sony alkaline

volume setting 7)

battery type.

batteries

(produced in Japan)

Plavback

CM-	220DV	210DV
C power daptor (1)	-	0
atteries LR6 (2)	0	-
assette tape IF-60 (1)	0	0
Ionaural nicrophone (1)	0	-
Carrying	0	_

▶ Getting Started

Preparing a Power Source

Choose one of the following power sources.

Make sure that nothing is connected

House Current (see Fig. A-E)

Connect the AC power adaptor to DC IN 3V and to the mains. Use the AC-E30HG AC power adaptor (supplied to TCM-210DV only). Do not use any other AC power



adaptor.

- Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of the plug before purchasing
- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to the easily accessible mains. Should you notice an abnormality in the AC power adaptor, disconnect it from the mains immediately

▶Operating the Unit

Recording (see Fig. **B**-**A**, **B**)

You can record right away with the built-in microphone. Make sure that nothing is connected to the MIC jack.

- 1 Insert a normal (TYPE I) tape with the side to be recorded facing the cassette holder.
- **2** Set REC TIME/PLAY MODE to the desired mode. NORMAL (4.8cm/s): for optimum sound. Recommended for normal recordings.
- DOUBLE (2.4cm/s): for double recording time (for example, 120 minutes using both sides of a 60-minute cassette). Suitable for recording conferences, dictations, etc. Not recommended for recording
- **3** Set VOR to H or L to start and pause recording automatically depending on the recording condition
 - H (high) to record at meetings or in a quiet and or spacious place. L (low) to record for dictation or in a noisy

Set VOR to OFF to start and stop recording manually.

When the sound to be recorded is not loud enough, set the VOR switch to OFF, or the unit may not start recording.

4 Press ● REC. ► PLAY is pressed simultaneously and recording

At the end of the tape, recording stops and the unit turns off automatically.

Grabadora portátil

POR FAVOR LEA MANUAL DE INSTRUCCIONES ANTES DE CONECTAR Y OPERAR ESTE EQUIPO

RECUERDE QUE UN MAL USO DE SU APARATO PODRIA ANULAR LA GARANTIA

during recording Release the button at the point to start. **ADVERTENCIA** Take out a Press ■ STOP and open

Press or slide

PAUSE - in the

■ REW/REVIEW

compartment lid by

To release pause

PAUSE -*

the cassette

Review the Press and hold

* PAUSE — will also be

To monitor the sound

The sound is fixed. You cannot

adjust monitoring volume with

VOL. The recording level is not

firmly to the EAR jack.

affected.

release function)

automatically released when

■ STOP is pressed (stop-pause-

Connect an earphone (not supplied)

• Do not use a High-position (TYPE II)

so, the sound may be distorted when

or metal (TYPE IV) tape. If you do

you play back the tape, or the

independent of this control.

Notes on VOR (Voice Operated

The VOR system is affected by the

place, the unit will stay in the

environmental recording condition

When you use the system in a noisy

recording mode. If the sound is too

not start recording. Set it to H (high)

soft, on the contrary, the unit will

or L (low) so that the system will

pick up the necessary sound only.

If you cannot get the results you

The VOR system may not record the

beginning of the sound you want to

record because it starts recording

an important recording, set it to

being accidentally recorded

Break off and remove the cassette

recording, cover the tab hole with

(turn over)

To prevent a tape from

over (see Fig. B-©)

tabs. To reuse the tape for

adhesive tape

only after it catches the sound. For

want, set it to OFF.

erased completely.

Recording)

previous recording may not be

The SPEED CONTROL switch (see

reverse side) works in the playback

mode only. Recording will be made

direction of the arrow

■ STOP

recording

cordeá

Para evitar incendios o descargas eléctricas, no exponga la unidad a la lluvia ni a la humedad.

No instale el aparato en un espacio cerrado, como una estantería para libros o un armario empotrado

- Para evitar el riesgo de incendio, no cubra el sistema de ventilación del aparato con periódicos, manteles, cortinas, etc. ni coloque
- velas encendidas sobre el aparato. · Para evitar el riesgo de incendio o electrocución, no coloque sobre el aparato objetos que contengan líquidos como, por ejemplo, un
- Es posible que en ciertos países se regule el desecho de la pila que se utiliza para alimentar este producto. Consulte con las autoridades locales.

Las instrucciones de este modelo son para 2 modelos.

Las cintas grabadas con el nterruptor REC TIME/PLAY MODE en la posición DOUBLE no pueden reproducirse orrectamente mediante una erabadora de cintas que no disponga de la función del nterruptor REC TIME/PLAY MODE.

Accesorios suministrados

TCM-	220DV	210DV
Aadaptador de alimentación de ca (1)	-	0
Pilas LR6 (2)	0	_
Cintas de cassette HF-60 (1)	0	0
Micrófono monoaural (1)	0	
Bolsa de transporte (1)	0	
O : existe		
- : no existe		

▶ Procedimientos iniciales

Preparación de una fuente de alimentación

Seleccione una de las siguientes fuentes de alimentación.

Pilas secas (consulte la figura A-A)

Asegúrese de que no hay ningún dispositivo conectado a la toma DC IN 3V

- 1 Abra la tapa del compartimiento de las pilas
- 2 Introduzca dos pilas R6 (tamaño AA) (suministrados con TCM-220DV solamente) con la polaridad correcta y cierre la tapa.

- No recargue las pilas secas. • No emplee una pila nueva con otra
- No utilice distintos tipos de pilas. • Cuando no vaya a utilizar la unidad durante varios días, retire las pilas
- para evitar que se produzcan daños derivados de fugas y corrosión de
- Las pilas secas no se consumirán cuando exista otra fuente de alimentación conectada.

Para extraer las pilas (consulte la figura A-B) Para ajustar la tapa del

compartimiento de las pilas si ésta se desprende accidentalmente (consulte la figura A-©)

Cuándo sustituir las pilas (consulte la figura A-D) Reemplace las pilas por otras nuevas

cuando la iluminación de la lámpara BATT se ilumine débilmente.

- Después de haber utilizado las pilas durante cierto tiempo, la lámpara BATT puede parpadear con el sonido de reproducción cuando aumente el volumen; sin embargo esto no significa que tiene que reemplazar las pilas
- La unidad reproducirá normalmente durante cierto tiempo aunque la lámpara BATT esté iluminada débilmente. Sin embargo, reemplace las pilas lo antes posible. Si no lo hiciese, la grabación siguiente no se realizaría correctamente

Duración de las pilas* (Horas aproximadas)

	Pila alcalina Sony LR6 (SG)**	Son R6P (SR)
Reproducción	16	4
Grabación	25	6,5
JEITA (Japan Information	o por la norma Electronics ar Technology In (Utilizando u E Sony en el qu	nd dustr n case

** Ćuando se utilizan pilas secas alcalinas "STAMINA" LR6 (SG) de Sony (fabricadas en Japón)

ajuste de volumen 7)

música grabada se reproduce con el

La duración de la pila puede acortarse dependiendo de las condiciones de funcionamiento, la temperatura ambiental y el tipo de pila.

Para obtener el máximo rendimiento posible, se recomienda emplear pilas alcalinas.

Corriente doméstica (consulte la figura A-E)

Conecte el adaptador de alimentación de ca a DC IN 3V y a la toma mural. Utilice el adaptador de alimentación de ca AC-E30HG (suministrado con TCM-210DV solamente). No emplee ningún otro adaptador de alimentación de ca.



- Las especificaciones de la unidad AC-E30HG varían en función de la zona. Compruebe la tensión local y la forma del enchufe antes de la adquisición. • No toque el adaptador de
- alimentación de ca con las manos • Conecte el adaptador de
- alimentación de ca a una toma de corriente de ca de fácil acceso. Si detecta alguna anomalía en el adaptador de alimentación de ca. desconéctelo inmediatamente de la toma de corriente de ca.

▶ Funcionamiento de la unidad

Grabación (consulte la figura **B**-**(**A), **(**B)

Es posible grabar inmediatamente con el micrófono incorporado. Compruebe que no hay nada conectado a la toma MIC.

1 Inserte una cinta normal (TYPE)

- I) con la cara en la que desee iniciar la grabación hacia el portacassettes.
- **2** Ajuste REC TIME/PLAY MODE en el modo que desee. NORMAL (4,8cm/s): para obtener un sonido óptimo. Recomendado para las grabaciones normales. DOUBLE (2,4cm/s): para duplicar el tiempo de grabación (por eiemplo, 120 minutos utilizando las dos caras de un cassette de 60 minutos). Adecuado para grabar conferencias, dictados, etc. No
- **3** Sitúe VOR en: H o L para iniciar y parar la grabación de manera automática, en función del estado de la grabación.

de música.

se recomienda para grabaciones

H (alto) para grabar en reuniones o en lugares silenciosos y/o amplios L (bajo) para grabar dictados o en lugares ruidosos.

Ajuste VOR en OFF para iniciar v detener la grabación manualmente

Si el sonido que va a grabarse no es lo suficientemente alto, ajuste el interruptor VOR en OFF, o es posible que la unidad no inicie la grabación

► PLAY se pulsa simultáneamente y la grabación

4 Pulse ● REC.

automáticamente

Al final de la cinta, la grabación se detiene y la unidad se desactiva

automaticamente.		
Para	Pulse o deslice	
Detener la grabación	■ STOP	
Introducir una pausa	PAUSE — en la dirección de la flecha Para quitar la pausa en la grabación, suelte PAUSE — *.	
Comprobar la parte recién grabada	Pulse y mantenga pulsado ◀◀ REW/REVIEW durante la grabación.	

cassette con la mano. * PAUSE — también se quitará automáticamente al pulsar ■ STOP (función de liberación de pausa con STOP).

Suelte el botón en el

punto de inicio de la

Pulse ■ STOP abra la

compartimento de

reproducción.

tapa del

Para controlar el sonido Conecte un auricular (no

grabación no se ve afectado.

suministrado) firmemente a la toma El sonido es fijo. No es posible ajustar el control de volumen mediante VOL. El nivel de

- No utilice ninguna cinta de tipo High (TYPE II) ni de metal (TYPE IV). Si lo hace, es posible que el sonido se distorsione cuando intente reproducir la cinta o que la grabación anterior no se elimine por
- El interruptor SPEED CONTROL (consulte el dorso de esta página) sólo funciona en modo de reproducción. La grabación se efectuará sin utilizar este control

Notas acerca de la VOR (Voice Operated Recording, Grabación activada mediante la voz)

- Las condiciones ambientales de la grabación afectan al sistema VOR. S utiliza este sistema en un lugar ruidoso, la unidad permanecerá en el modo de grabación. Por el contrario, si el sonido es demasiado débil la unidad no empezará a grabar. Ajuste el sistema en H (alto) o L (bajo) para que capte sólo el sonido necesario Si no obtiene los resultados
- Es posible que el sistema VOR no grabe el principio del sonido que desea grabar, ya que no empieza a grabar hasta que no capta dicho sonido. Si se trata de una grabación importante, ajústelo en OFF.


deseados, ajústelo en OFF.


Para evitar grabar accidentalmente sobre una grabación previa (consulte la figura **B**-©)


cassette. Para volver a grabar la cinta, cubra el orificio de las lengüetas con cinta adhesiva.

Rompa y retire las lengüetas del

(dé la vuelta)

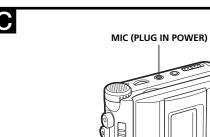

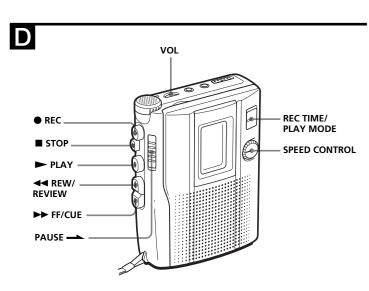

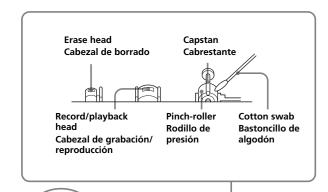

Recording from **Various Sound** Sources

Recording with an **External Microphone (see** Fig. C)

Connect a microphone (supplied to TCM-220DV only) to the MIC jack. There is a tactile dot beside the MIC tack

Use a microphone of low impedance (less than $3 \text{ k}\Omega$). When using a plug-in-power system microphone, the power to the microphone is supplied from this unit

When recording with an external microphone, the VOR system may not work properly due to difference in

Recording from Another Equipment

Connect another equipment to the MIC jack using the RK-G64HG connecting cord (not supplied).

Playing a Tape (see Fig. D)

- 1 Insert a cassette with the side to be played facing the cassette
- 2 Set REC TIME/PLAY MODE to the same position as that used for recording. To playback commercially available music tape, etc., select NORMAL.
- **3** Press ► PLAY and then adjust the volume. The ► PLAY button has a tactile dot on it and the VOL control also has a tactile dot beside it to show the direction to turn up the volume.
- 4 Adjust the tape playback speed Turn SPEED CONTROL to: SLOW (slow) to play back at a slower speed. Center position to play back at normal speed. FAST (fast) to play back at a faster speed.

At the end of the tape, playback stops and the unit turns off automatically.

If you plug in headphones (not supplied) to the EAR jack, you will get monaural output from both left and right channels.

Press or slide Stop playback/ ■ STOP forward or rewind

Pause playback PAUSE - in the direction of the To release pause nlauback, release

PAUSE →*. Search forward Press and hold ▶► FF/CUE and playback (CUE) release it at the point you want. Press and hold backward **◄** REW/REVIEW and release it at the point you want. (RÉVIEW)

Fast forward** ►► FF/CUE during Rewind** **◄** REW/REVIEW

during stop Start recording REC during playback Take out a Press ■ STOP and open the cassette cassette

* PAUSE — will also be automatically released when ■ STOP is pressed (stop-pause-

release function). * If you leave the unit after the tape has been wound or rewound, the batteries will be consumed rapidly. Be sure to press ■ STOP.

compartment lid by

Note on REVIEW

Playback may not start automatically even if you release < REW/ REVIEW at the end of the tape. To start playback again, pres ■ STOP, then press ➤ PLAY.

▶ Additional Information

Precautions

On power

• Operate the unit only on 3 V DC. For AC operation, use the AC power adaptor recommended for the unit. Do not use any other type. For battery operation, use two R6 (size AA) batteries.

- On the unit • Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight. excessive dust or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the batteries or disconnect the AC power adaptor, and have the unit checked by qualified personnel before operating it any further.
- Keep personal credit cards using magnetic coding or spring-wound watches, etc. away from the unit to prevent possible damage from the magnet used in the speaker.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a tape.

On tapes longer than 90

We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to be stretched easily. This may cause malfunction of the unit or sound deterioration.

If you have any questions or problems concerning your unit, olease consult your nearest Sony

Maintenance (see Fig. **3**)

To clean the tape heads and

Press • REC while pushing the lever in the tape compartment. Clean the tape head and tape path using a cotton swab and commercially available cleaning solvent after every 10 hours of use.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Troubleshooting

Should any problem persist after vou have made these checks. consult your nearest Sony dealer

The unit does not operate.

- The batteries have been inserted with incorrect polarity.
- The batteries are weak. • PAUSE — is slid in the
- direction of the arrow. • The AC power adaptor is not firmly connected.
- The unit will not run on dry batteries if the AC power adaptor is left plugged into the DC IN 3V jack even though you disconnect the AC power adaptor from the power source.

You cannot press REC. • The tab on the tape has been

removed.

Recording cannot be made.

· Connection is made incorrectly. • VOR has been set to the improper position when VOR function works

Recording is interrupted.

• VOR is set to H or L. When you do not use VOR, set it to OFF

Recording cannot be erased completely.

- The erase head is contaminated • You are using a High-position (TYPE II) or metal (TYPE IV) tape
- You cannot play the tape. • The tape has reached the end. Rewind the tape.

No sound comes from the

• The earphone is plugged in. • The volume is turned down completely.

The sound drops out or has with excessive noise. • The volume is turned down

- completely. • The batteries are weak.
- Use the unit away from radiowave-emitting devices such as cellular phones.
- The heads need cleaning. See "Maintenance."
- Direct placement of the cassette tape on the speaker resulted in magnetization and deteriorated tonal quality.
- You are using a High-position al micrófono. (TYPE II) or metal (TYPE IV) tape

Tape speed is too fast or too slow in Playback mode.

- Improper setting of the REC TIME/PLAY MODE switch. Set it to the same speed as that used for recording
- SPEED CONTROL is set at a point other than the center.
- · The batteries are weak

Specifications

Recording system 2-track 1 channel monaural Tape speed

4.8 cm/s or 2.4 cm/s Frequency range

250 - 6 300 Hz using nomal (TYPE I) cassette (with REC TIME/PLAY MODE switch at "NORMAL") Speaker

Approx. 5.0 cm (2 in.) dia. Power output

350 mW (at 10 % harmonic distortion)

Microphone input jack (minijack) sensitivity 0.2 mV for 3 k Ω or lower impedance microphone

Earphone jack (minijack) for 8 -300 Ω earphone Variable range of the tape speed

From approx. +30% to -15% (with REC TIME/PLAY MODE switch at "NORMAL") Power requirements

• 3 V DC batteries R6 (AA) x 2 • External DC 3 V power sources Dimensions (w/h/d) (incl. projecting

parts and controls) Approx. $86.9 \times 116.3 \times 36.5 \text{ mm}$ $(3^{1}/2 \times 4^{5}/8 \times 1^{7}/16 \text{ in.})$ Mass (main unit only) Approx. 171 g (6.1 oz.)

Design and specifications are subject

to change without notice.

Al final de la cinta, la reproducción

Grabación de

Grabación con un micrófono externo (consulte la figura **G**)

Conecte un micrófono (suministrados con TCM-220DV solamente) a la toma MIC. Existe un punto táctil al lado de la toma

Emplee un micrófono de baja impedancia (inferior a 3 k Ω). Si utiliza un micrófono con sistema de alimentación por enchufe, esta unidad suministrará la alimentación

Nota

Al grabar con un micrófono externo, es posible que el sistema VOR no uncione correctamente debido a la diferencia en la sensibilidad.

Grabación desde otro equipo

Conecte otro equipo a la toma MIC mediante el cable de conexión RK-G64HG (no suministrado).

Reproducción de una cinta (consulte la figura **D**)

- 1 Inserte una cinta con la cara que desee reproducir orientada hacia el portacassettes
- 2 Ajuste REC TIME/PLAY MODE en la misma posición que la utilizada para grabar Para reproducir cintas de música comerciales, etc., seleccione NORMAL.
- **3** Pulse ► PLAY y, a continuación, ajuste el
- volumen. El botón PLAY tiene un punto táctil justo encima y el control VOL tiene un punto táctil al lado que muestra la dirección para subir el
- **4** Ajuste la velocidad de reproducción de la cinta. Gire SPEED CONTROL hasta: SLOW (lento) para reproducir a una velocidad menor. La posición central para reproducir a velocidad normal. FAST (rápido) para reproducir a una velocidad mayor.

se detiene y la unidad se desactiva automáticamente.

Si enchufa los auriculares (no suministrados) en la toma EAR, obtendrá salida monoaural a través de ambos canales, izquierdo y derecho.

distintas fuentes de sonido

rápido de cinta Introducir una PAUSE - en la pausa Buscar hacia delante durante

Detener la

detener el

rebobinado

avance o

la reproducción → FF/CUE, y (CUE) suéltelo en el punto aue desee. Buscar hacia Pulse y mantenga pulsado **◄** REW/REVIEW, atrás durante la reproducción (REVIEW) v suéltelo en el punto que desee. Avanzar ►► FF/CIIF

Pulse o deslice

dirección de la

en la reproducción

Pulse y mantenga

Para auitar la vausa

suelte PALISE

flecha

durante la detención rápidamente³ Rebobinar* **◄** REW/REVIEW durante la detención Iniciar la REC grabación

<u>repro</u>ducción Extraer un Pulse ■ STOP v abra la tapa del cassette compartimento de

* PAUSE - también se liberará automáticamente si se pulsa ■ STOP (función de liberación de

cassette con la mano

pausa con STOP). Si deja la unidad encendida después de rebobinar la cinta, las pilas se consumirán con rapidez. Asegúrese de pulsar ■ STOP.

Nota sobre REVIEW

Es posible que la reproducción no se inicie de manera automática, aunque suelte REW/REVIEW al finalizar la cinta. Para reiniciar la reproducción pulse ■ STOP y, a continuación, pulse

▶ Información adicional

Precauciones

Alimentación

• Alimente la unidad sólo con 3 V cc. Para utilizar ca, emplee el adaptador de alimentación de ca recomendado para la unidad. No emplee ningún otro tipo de adaptador. Para utilizar pilas. emplee dos pilas R6 (tamaño AA).

Unidad

- No deje la unidad cerca de fuentes de calor, ni en un lugar expuesto a la luz directa del sol, al polvo excesivo o a golpes.
- Si cae algún objeto sólido sobre la unidad o se vierte líquido en el interior, retire las pilas o desconecte el adaptador de alimentación de ca v solicite asistencia técnica de personal cualificado para revisar la unidad
- antes de utilizarla de nuevo. • Aleje de la unidad tarjetas de crédito con código magnético o relojes de cuerda, etc., para evitar que se produzcan posibles daños
- causados por el imán del altavoz. Si no se ha utilizado la unidad durante un largo periodo de tiempo, ponga en marcha el modo de reproducción y deje que se caliente durante unos minutos antes de insertar una cinta.

Cintas superiores a 90 minutos

No se recomienda la utilización de cintas de más de 90 minutos de duración. Dichas cintas son muy finas v suelen dilatarse con facilidad, lo que puede provocar errores de funcionamiento de la unidad o un deterioro del sonido

Si tiene alguna duda o problema en relación a la unidad, póngase en contacto con su proveedor Sony más cercano.

Mantenimiento (consulte la figura **3**)

Para limpiar los cabezales y el recorrido de la cinta Pulse • REC mientras inclina la

palanca del compartimento de Limpie el cabezal y la trayectoria de

la cinta mediante un paño de algodón y una solución detergente normal transcurridas 10 horas de

Para limpiar el exterior

Utilice un paño suave ligeramente humedecido en agua. No emplee alcohol, bencina ni diluyente

Solución de problemas

Si el problema no se soluciona después de realizar las siguientes comprobaciones, póngase en contacto con el proveedor Sony más

La unidad no funciona.

- Ha insertado las pilas con la polaridad incorrecta.
- Las pilas disponen de poca carga
- Ha deslizado PAUSE en la
- dirección de la flecha. • El adaptador de alimentación de
- ca no está firmemente conectado. · La unidad no funcionará con pilas secas si el adaptador de
- alimentación de ca está conectado a la toma DC IN 3V, aunque dicho adaptador no esté conectado a la fuente de alimentación.

No es posible pulsar ● REC. • Ha retirado la lengüeta de la cinta.

No es posible grabar. Ha realizado la conexión

activada.

incorrectamente. • VOR se ha ajustado en la posición incorrecta con la función VOR

Se ha interrumpido la grabación.

• VOR está ajustado en H o en L. Si no utiliza la función VOR, sitúelo en la posición OFF.

No es posible borrar la grabación por completo.

• El cabezal de borrado está sucio. Está utilizando una cinta de tipo High (TYPE II) o de metal (TYPE

No es posible reproducir la cinta. • La cinta ha llegado al final. Rebobínela.

El altavoz no emite sonido.

- Ha enchufado los auriculares.
- Ha reducido el volumen por completo.

Se producen pérdidas de sonido o se oye con ruido excesivo.

- Ha reducido el volumen por
- Las pilas disponen de poca carga. • No utilice la unidad cerca de dispositivos que emitan ondas radioeléctricas, como teléfonos celulares (móviles).
- Deben limpiarse los cabezales. Consulte "Mantenimiento".

La velocidad de cinta es

demasiado alta o demasiado baja

· Ajuste inadecuado del interruptor

Ajústelo en la misma velocidad

• SPEED CONTROL está ajustado

en un punto que no es el central.

que la utilizada para grabar.

Las pilas disponen de poca

Especificaciones

2 pistas 1 canal monoaural

250 - 6 300 Hz con cassettes

interruptor REC TIME/PLAY

MODE ajustado en la posición

350 mW (distorsión armónica de

Toma de entrada de micrófono

para micrófono de 3 kΩ de

mpedancia o inferior

(minitoma), sensibilidad 0,2 mV

Toma de auriculares (minitoma)

para auriculares de 8 a 300 Ω

interruptor REC TIME/PLAY

MODE ajustado en la posición

Fuentes de alimentación de cc 3 V

Gama variable de la velocidad de

De +30% a -15% (con el

Requisitos de alimentación

• 3 V cc, pilas R6 (AA) x 2

Dimensiones (an/al/prf) (partes y

Aprox $86.9 \times 116.3 \times 36.5 \text{ mm}$

Peso (unidad principal solamente)

Diseño y especificaciones sujetos a

controles salientes incluidos)

"NORMAL")

Aprox. 171 g

cambio sin previo aviso.

normales (TYPE I) (con el

Aprox, 5.0 cm de diámetro

Sistema de grabación

 $4.8 \, \text{cm/s} \circ 2.4 \, \text{cm/s}$

Velocidad de cinta

Gama de frecuencias

"NORMAL")

Salida de potencia

10 %)

Altavoz

Entrada

energía.

en el modo de reproducción.

REC TIME/PLAY MODE.

- El cassette se colocó directamente Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanshin as follows: sobre el altavoz, lo que causó la magnetización y el deterioro de la 1. LABOR: For a period of 90 days from the date of purchase, if this Product is determined to be defective calidad tonal. Sony will repair or replace the Product, at its option, at no charge, or pay the labor charges to any Sony autho rized service facility. After the Warranty Period, you must pay for all labor charges. • La cinta que utiliza es de tipo
- High (TYPE II) o de metal (TYPE 2. PARTS: In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one (1) year. After 90 days from the date of purchase, labor for removal and installation is available from Sony authorized service facilities or a Sony Service Center at your expense.

This warranty is valid only in the United

Esta garantía sólo es válida en los Estados

LIMITED WARRANTY

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility. This warranty does not cover customer instruction, installation, set up adjustments or signal reception prob-

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negli-gence, commercial use, or modification of, or to any part of the Product, including the antenna. This swarrant, does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty

troof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the

This warranty is invalid if the factory applied serial number has been altered or removed from the Produc REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIB TED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICU-

LAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. That warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked question

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for Sony Direct Response Cente

For an accessory or part not available from your authorized dealer, call

or write to: Sony Direct Response Center

Portable Audio